

<b>Command</b>	<b>Description</b>	<b>Default</b>
Connect	Connects to a station on the Internet, based on its node number.	num
Connect by Call	Connects to a station on the Internet, based on its callsign.	<b>C</b> +call+ <b>#</b>
Random Node	Selects an available node (of any type) at random, and tries to connect to it.	<b>00</b>
Random Link	Selects an available link or repeater (-L or -R) at random, and tries to connect to it.	<b>01</b>
Random Conf	Selects a conference server at random, and tries to connect to it.	<b>02</b>
Random User	Selects an available single-user station at random, and tries to connect to it.	<b>03</b>
RandomFavNode	Selects an available node (of any type) at random from the Favorites List, and tries to connect to it.	<b>001</b>
RandomFavLink	Selects an available link or repeater (-L or -R) at random from the Favorites List, and tries to connect to it.	<b>011</b>
RandomFavConf	Selects a conference server at random from the Favorites List, and tries to connect to it.	<b>021</b>
RandomFavUser	Selects an available single-user station at random, and tries to connect to it.	<b>031</b>
Disconnect	Disconnects the station that is currently connected. If more than one station is connected, disconnects only the most-recently-connected station.	<b>#</b>
Disconnect All	Disconnects all stations.	<b>##</b>
Reconnect	Re-connects to the station that most recently disconnected.	<b>09</b>
Status	Announces the callsign of each station currently connected.	<b>08</b>
Link Down	Disables EchoLink (no connections can be established).	(none)
Link Up	Enables EchoLink.	(none)
Play Info	Plays a brief ID message.	<b>*</b>
Query by Call	Looks up a station by its callsign, and reads back its node number and status.	<b>07</b> +call+ <b>#</b>
Query by Node	Looks up a station by its node number, and reads back its callsign and status.	<b>06</b> +num
Profile Select	Switches to a different stored set of configuration settings (0 through 9).	<b>B#</b> +num